


 


 



 




 
 

 
 

 
 


 





Originale	Sostituto
 Power On	 Power
 Standby	 Shift + Power
 Input	 AV
 Mute	 Mute
 Vol Up	 Shift + Right
 Vol Down	 Shift + Left
 Volume+	 Vol +
 Volume-	 Vol -
 T/V/CH Level	 Smart
 CH/Album Up	 Ch +
 CH/Album Down	 Ch -
 Up	 Up
 Down/Search	 Down
 Sel >	 Right
 < Sel	 Left
 Enter	 Ok
 Play	 Play

Originale	Sostituto
 Stop	 Stop
 </Pause	 Pause
 >> Preset+	 >>
 <</Preset-	 <<
 >>/Tune+	 >>
 <</Tune-	 <<
 Setup/Home	 Media
 Test/Disc Menu	 Menu
 Dimmer/Return	 Back
 Display	 Info
 RDM/Room2	 Exit
 Audio	 Options
 Surround/Play List >	 Green
 < Surround/Play List	 Red
 Stereo/Play M	 TV/R
 1 / Tuner	 1
 2 / CD	 2






 




 

 





 



 







 



 



 



 
 







 











Originale	Sostituto	Originale	Sostituto
F.AUX 3	3 / F.Aux 3	3	3
TAPE 4	4 / Tape 4	4	4
BT IN 5	5 / BT In 5	5	5
VIDEO 1 6	6 / Video 1 6	6	6
VIDEO 2 7	7 / Video 2 7	7	7
VIDEO 3 8	8 / Video 3 8	8	8
9	9	9	9
0	0	0	0
+10	10	-/--	Guide
EXT.IN	Ext In	D	Blue
SLEEP	Sleep	PROG SLEEP	Sleep
AVR	AVR	SHIFT + 1	Shift + 1
RECALL DOCK	Dock	SHIFT + 2	Shift + 2
SELECT CD	CD	SHIFT + 3	Shift + 3
AUX	AUX	SHIFT + 4	Shift + 4
BD	BD	SHIFT + 5	Shift + 5
TV	TV	SHIFT + 6	Shift + 6

Originale	Sostituto
SAT	SHIFT + 7 Shift + 7
CBL	SHIFT + 8 Shift + 8









 








 









 

 
 





Originale		Sostituto		Originale		Sostituto	
	Power On		Power		Audio		Dual
	Standby	 + 	Shift + Power		Subtitle		Subt
	Up		Up		1		1
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	Enter		Ok		5		5
	Setup/Home		Media		6		6
	Test/Disc Menu		Menu		7		7
	Play		Play		8		8
	Stop		Stop		9		9
	>>		>>		0		0
	<<		<<				
	I<<		I<<				
	>>I		>>I				
	Display		Info				
	Dimmer/Return		Back				






	Originale	Sostituto	Originale	Sostituto
	CD			Power
	Play			Play
	Stop			Stop
	Pause			Pause
	I<<			I<<
	>>I			>>I
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0





Originale		Sostituto		Originale		Sostituto	
	Power On		Power		Audio		Options
	Standby	 + 	Shift + Power		< Surround/Play List		Red
	RDM/Room2		Exit		Surround/Play List >		Green
	CH/Album Up		Ch +		Stereo/Play M		TV/R
	CH/Album Down		Ch -		Sleep / Dock M.		Sleep
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	<<		<<				
	I<<		I<<				
	>>I		>>I				
	Test/Disc Menu		Menu				
	Display		Info				
	Enter		Ok				
	Up		Up				
	Down		Down				

