





 



 











 

 







 

 

 

 

 
















Originale		Sostituto		Originale		Sostituto	
	Power		Power		Subtitle		Subtitle / EQ
	Eject		Eject / Surround		Zoom/Size		Zoom / Size
	Tv/Radio		Tv/Radio /		Aspect		Shift + Picture / Format
	Red/Goto		Red / Netflix / Search		Subpage		Shift + Subtitle / EQ
	Red/Goto		Shift + Text /		Media		Shift + Display / Media
	Green/Angle		Info / Angle		Play		Play / Slow
	Green/Angle		Green / APP / Repeat		Pause		Pause / Step / Freeze
	Yellow/Repeat		Shift + Green / APP /		<<		<< / Tune-
	Yellow/Repeat		Yellow / YouTube / Repeat		>>		>> / Tune+
	Blue/A-B		Shift + Blue / Prime		Rec		Rec / Rec Mode
	Blue/A-B		Blue / Prime Video / Random		D.Setup		Setup / OPT /
	FAV		Fav / Marker / PC		Stop		Stop / Hold
	Text		Text / Goto		I<<		I<< / Preset-
	Freeze/Hold		Shift + Stop /		>>I/Index		>>I / Preset+
	Freeze/Hold		Shift + Pause / Step /		>>I/Index		Smart / List
	EPG		Guide / EPG / -/--		Menu		Menu / Home
	D.Menu		D.Menu / Top		Lang/Audio		Audio / Lang I/II





Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Shift + Sound / Title
 Title/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/-	 Shift + Guide / EPG / -/-
 0	 0
 Recall	 Back / Return
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

