







 





























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Rec	 Rec / Rec Mode
 TV Sys.	 D.Menu / Top
 Browser	 Display / Media
 Copy	 Picture / Format
 Music	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Repeat	 Shift + Green / APP / Repeat

Originale	Sostituto
 0	 0
 Info	 Info / Angle
 <<	 << / Tune-
 Vol -	 Vol-
 Vol +	 Vol+
 I<<	 I<< / Preset-
 >>	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Home	 Shift + Menu / Home
 Up	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right





Originale		Sostituto		Originale	Sostituto
	Menu		Menu / Home		
	Down		Down		
	Setup		Setup / OPT /		
	Time Shift		Sleep / Timer		
	Slow I>		Shift + Play /		
	A-B		Shift + YouTube /		
	Goto		Shift + Text /		
	Zoom		Zoom / Size		
	Audio		Audio / Lang I/II		
	Subtitle		Subtitle / EQ		
	Angle		Shift + Info / Angle		
	Red		Red / Netflix / Search		
	Green / EPG		Green / APP / Repeat		
	Green / EPG		Guide / EPG / -/--		
	Yellow / Text		Text / Goto		
	Yellow / Text		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		

