
 
 
 






 

 
 
 
 

 



 
 
 


 

 


 

 

 


 



Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Progr.	 Sleep
Audio Off	 Mute	OK Enter	 Ok
Slow Down	 Ch -	Menu Right	 Right
Slow Up	 Ch +	Next	 >>I
Stop	 Stop	Prev.	 I<<
Subt.	 Subt	Top Menu	 D. Menu
Auto/Track	 3D	Return	 Back
Rep/A-B	 +  Shift + Text	Menu Down	 Down
Pause	 Pause	Volume+	 Vol +
Title	 List	Volume-	 Vol -
Zoom	 +  Shift + Eject	1	 1
Repeat/1/All	 Text	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	Resume	 +  Shift + Play



Originale	Sostituto	Originale	Sostituto
7	 7	Angle	 Format
8	 8	Random	 TV/R
9	 9	Tone	 +  Shift + Vol -
+10	 Guide	Karaoke/Step	 +  Shift + Pause
0	 0	Setup	 Options
C/CH	 Pre Ch	Echo-	 +  Shift + Ch -
Video	 +  Shift + Smart	Erase	 +  Shift + Exit
Record	 Rec	Open/Close	 Eject
Mode	 Media	Clear/00:00	 Exit
Audio	 Dual	Info	 Info
Rewind	 <<		
F.Forward	 >>		
Play/Back	 +  Shift + Back		
Syst.Preset	 Smart		
Vocal/Assist	 +  Shift + Vol +		
Play	 Play		
Echo+	 +  Shift + Ch +		

