



Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / AV	0
0 / AV	AV / Input / RDS
CH/TR. -	CH- / Page-
CH/TR. +	CH+ / Page+
Rec / OTR	Rec / Rec Mode
Up / Play / Slow	Up
Up / Play / Slow	Play / Slow

Originale	Sostituto
Pause / Still	Pause / Step / Freeze
Left / << / <<	Left
Left / << / <<	<< / Tune-
Left / << / <<	<< / Preset-
Right / >> / >>	Right
Right / >> / >>	>> / Preset+
Right / >> / >>	>> / Tune+
Down / Stop	Down
Down / Stop	Stop / Hold
Enter	OK
Index	Info / Angle
Cancel	Exit / Cancel / Clear
Menu	Menu / Home
Timer Rec	Sleep / Timer
Program	TV/Radio /
Call	D.Menu / Top
Clock / Counter	Red / Netflix / Search



