












 






 





 

 



 
 





Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Left	 Left
Top Menu	 +  Shift + Menu	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Exit
Auto/Track	 Red	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Pause	 Pause	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Rep/A-B	 +  Shift + Text	Next	 >>
Title	 List	Volume-	 Vol -
Repeat/1/All	 Text	1	 1
Stop	 Stop	Prev.	 <<
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	Digest	 Blue
Display	 Info	5	 5



Originale	Sostituto	Originale	Sostituto
Record	 Rec	0	 0
6	 6	Setup	 Options
7	 7	C/CH	 Pre Ch
Pbc	 Yellow	Input Source	 Shift + AV
R/L	 Green	Echo+	 Shift + Ch +
8	 8	Echo-	 Shift + Ch -
Resume	 Shift + Play	Info	 Shift + Info
9	 9	Angle	 Format
Karaoke/Step	 Shift + Pause	Lang	 Dual
F.Forward	 >>	Shuffle	 TV/R
Play/Back	 Smart	Random	 Shift + TV/R
Open/Close	 Eject		
Audio	 Shift + Dual		
+10	 Guide		
Timer	 Sleep		
Play	 Play		
Rewind	 <<		

