

 

 









 

 



 

 







 





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 Canali+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Canali-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Volume+	 Vol+
 0	 0
 Prec.	 Back / Return
 Riposo	 Sleep / Timer
 Volume-	 Vol-

Originale	Sostituto
 Muto / Normal	 Mute / Dimmer
 Timer Rec	 D.Menu / Top
 Prog. CFM	 TV/Radio /
 CAF	 Info / Angle
 Menu	 Menu / Home
 Counter	 Red / Netflix / Search
 Counter Reset	 Green / APP / Repeat
 Ricerca Set-	 Left
 Ricerca Set+	 Right
 Auto Tracking	 Smart / List
 Tracking	 Down
 Tracking	 Up
 Invio	 OK
 Cancel	 Exit / Cancel / Clear
 Slow	 Shift + Slow  Play /
 Index	 Picture / Format
 Clock	 Setup / OPT /



