

 









 

 















 







Originale	Sostituto
	 Power
	 Mute / Dimmer
	 Stop / Hold
	 Audio / Lang I/II
	 Subtitle / EQ
	 Picture / Format
	 Sleep / Timer
	 TV/Radio /
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 Exit / Cancel / Clear
	 Down

Originale	Sostituto
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Fav / Marker / PC





Originale	Sostituto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Vol+
	Shift + Smart / List

Originale	Sostituto

