


 
 





 





 






 

 

 










| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute |
|  TV |  Media |
|  Text |  Text |
|  Info |  Info |
|  PIP |  Smart |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  Shift + Guide |

| Originale | Sostituto |
|---|--|
|  Source |  AV |
|  Menu |  Menu |
|  DTV Guide |  Guide |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  PR+ |  Ch + |
|  PR- |  Ch - |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Exit |  Exit |
|  ARC |  3D |
|  PRE-CH |  Back |
|  Mix |  Shift + Text |
|  CANCEL |  Subt |





| Originale | Sostituto |
|---|---|
|  Hold |  Options |
|  Size |  Eject |
|  Reveal |  Shift + Options |
|  Update |  Play |
|  Index |  Shift + Info |
|  Red |  Red |
|  Green |  Green |
|  Yellow |  Yellow |
|  Text Store |  Pause |
|  Blue |  Blue |
|  PIP Prog+ |  >> |
|  S.Select |  Sleep |
|  PIP Prog- |  << |
|  DTV Page- |  I<< |
|  DTV Setup |  D. Menu |
|  Tv/Radio |  TV/R |
|  DTV Page+ |  >>I |

| Originale | Sostituto |
|---|---|
|  PC |  Shift + Media |
|  Dual I-II |  Dual |
|  Sleep/Timer |  Shift + Power |
|  Still |  Shift + Subt |
|  SSM |  Shift + Dual |
|  Text List |  List |
|  PSM |  Format |
|  DTV Fav |  Pre Ch |
|  PIP Input |  Shift + Red |
|  PIP Position |  Shift + Yellow |
|  PIP Size |  Shift + Green |
|  Swap |  Shift + Back |

