











Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Input	 AV / Input / RDS
 P+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 *	 D.Menu / Top
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 *1	 Smart / List
 *2	 Display / Media
 Red	 Red / Netflix / Search





Originale	Sostituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Audio	Audio / Lang I/II

Originale	Sostituto

