










 




















 













 



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Source	 AV / Input / RDS
 P+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 *	 Smart / List
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix / Search
 YouTube	 Shift + Yellow / YouTube / Repeat A-B
 prime video	 Shift + Blue / Prime / Random
 USB	 Shift + 8
 Red	 Red / Netflix / Search





Originale		Sostituto		Originale	Sostituto
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	<<		<< / Tune-		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Stop		Stop / Hold		
	Audio		Audio / Lang I/II		

