


 

 

 


 

 

 

 















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV / ATV	 D.Menu / Top
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer





Originale	Sostituto
 Vol +	 Vol+
 MTS	 Audio / Lang I/II
 CH +	 CH+ / Page+
 Vol -	 Vol-
 REC List	 Smart / List
 CH -	 CH- / Page-
 FAV List	 Fav / Marker / PC
 REC	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down




**Originale**
**Sostituto**

	Display		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Guide		<< / Tune-
	<< / Guide		Guide / EPG / -/--
	Play/Pause / Timeshift		Play / Slow
	>> / Aspect		>> / Tune+
	<< / Cancel		<< / Preset-
	>>  / Subpage		>>  / Preset+
	Stop / Index		Info / Angle
	Stop / Index		Stop / Hold
	TV / Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Reveal		Setup / OPT /
	Size		Zoom / Size

**Originale**
**Sostituto**

	Hold		Shift + Stop /
	Text		Text / Goto

