
 












Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left / Vol-		Left
	Mute		Mute / Dimmer		OK		OK
	1		1		Right / Vol+		Right
	2		2		Right / Vol+		Vol+
	3		3		Down / CH-		CH- / Page-
	4		4		Down / CH-		Down
	5		5		Page+		Smart / List
	6		6		Page+		Shift + CH+ /
	7		7		Page+		>> / Preset+
	8		8		Page-		Display / Media
	9		9		Page-		Shift + CH- /
	Menu		Menu / Home		Page-		I<< / Preset-
	0		0		Fav		Fav / Marker / PC
	Exit		Exit / Cancel / Clear		Guide		Guide / EPG / -/-
	Up / CH+		Up		i		Info / Angle
	Up / CH+		CH+ / Page+		TV/Radio		TV/Radio /
	Left / Vol-		Vol-		Last		Back / Return



