




 

 


 

 


 

 

 

 


 

 




 











 
 

 

 

 

 

 

 

 



 

 

 

 

 

 

 



 

 





 

 

 



 

 

 

 

 
 
 
 
 

 



Originale	Sostituto
 Eject	 Eject / Surround
 Tv Power	 +  Shift + Power
 Power	 Power
 Stereo/mono	 +  Shift + Sound / Title
 Name	 AV / Input / RDS
 Dimmer	 +  Shift + Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Tv/Video	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Memory	 +  Shift + D.Menu / Top Menu
 Time	 Sleep / Timer
 Muting	 Mute / Dimmer
 Play Mode	 Play / Slow
 1	 1
 1 TV	 +  Shift + 1
 2	 2
 2 TV	 +  Shift + 2

Originale	Sostituto
 3	 3
 3 TV	 +  Shift + 3
 Function	 +  Shift + Setup / OPT / Tools
 Audio	 Audio / Lang I/II
 4	 4
 4 TV	 +  Shift + 4
 5	 5
 5 TV	 +  Shift + 5
 6	 6
 6 TV	 +  Shift + 6
 Band	 Picture / Format
 Angle	 Info / Angle
 7	 7
 7 TV	 +  Shift + 7
 8	 8
 8 TV	 +  Shift + 8
 9	 9





Originale	Sostituto
 9 TV	 Shift + 9
 Sound Field	 Sound / Title
 Subtitle	 Subtitle / EQ
 >10	 Guide / EPG / -/--
 >10 TV	 Fav / Marker / PC
 0/10	 0
 0/10 TV	 Shift + 0
 Enter	 Shift + OK
 Display	 Display / Media
 Vol+	 Vol+
 Vol+ Tv	 Shift + Vol+
 Vol-	 Vol-
 Vol- Tv	 Shift + Vol-
 I<<	 I<< / Preset-
 I<< TV	 Shift + I<< / Preset-
 >>I	 >>I / Preset+
 >>I TV	 Shift + >>I / Preset+

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Play/Select	 Shift + Play /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Display	 Shift + Display / Media
 DVD Top Menu	 Menu / Home
 Up	 Up
 DVD Menu	 D.Menu / Top
 Return	 Back / Return
 Left	 Left
 OK	 OK
 Enter TV	 Shift + Down
 Right	 Right
 DVD Setup	 Setup / OPT /
 AMP Menu	 Shift + Menu /
 Down	 Down

