
 

 
 


 

 

 


 
 
 
 
 
 
 
 

 
 
 
 
 

 

 

 

 


 
 
 
 



 














 





 



 
 

 





Originale	Sostituto
 [i+]/[?]	 Info / Angle
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=]	 Text / Goto
 0	 0
 Recall	 Back / Return
 Digital/Analog	 Display / Media
 A/B	 Shift + Yellow / YouTube / Repeat A-B
 Format	 Picture / Format

Originale	Sostituto
 [> <]	 Shift + Picture / Format
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [I]	 Guide / EPG / -/--
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Tools	 Setup / OPT /
 Menu	 Menu / Home
 I<<	 I<< / Preset-
 ←	 Shift + Tune-





Originale	Sostituto
 [i+]/[?]	 Info / Angle
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back / Return
 A/B	 Yellow / YouTube / Repeat
 Up	 Up
 Left	 Left
 OK	 OK

Originale	Sostituto
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 I<<	 I<< / Preset-
 ←	 Shift + << /
 →	 Shift + >> /
 >>I	 >>I / Preset+
 <II/<I/<<	 << / Tune-
 Play	 Play / Slow
 >>I/>II>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Top Menu	 D.Menu / Top
 Menu BD/DVD	 Menu / Home

 

 

 

 

 



 



 



 

 

 



 





 

 

 

 





 

 

 











 

 







Originale	Sostituto	Originale	Sostituto
[i+]/[?]	Info / Angle	Green	Green / APP / Repeat
Power	Power	Yellow	Yellow / YouTube / Repeat
1	1	Blue	Blue / Prime Video / Random
2	2	Up	Up
3	3	Left	Left
4	4	OK	OK
5	5	Right	Right
6	6	Return	Back / Return
7	7	Down	Down
8	8	Tools	Setup / OPT /
9	9	Menu	Menu / Home
[≡]	Text / Goto	I<< / Preset-	I<< / Preset-
0	0	>>I / Preset+	>>I / Preset+
Digital/Analog	Display / Media	<< / Tune-	<< / Tune-
[+]	Shift + Stop /	Play	Play / Slow
[><]	Picture / Format	>>I/>/II>	>> / Tune+
Red	Red / Netflix / Search	Theatre	Smart / List





Originale	Sostituto	Originale	Sostituto
 [i+]/[?]	 ANGLE INFO Info / Angle		 OK OK
 TV I/O Power			 Right Right
 1	 TV 1 1		 SHIFT + BACK Shift + Back / Return
 2	 DVD 2 2		 Down Down
 3	 CD - STB 3 3		 HOME MENU Menu / Home
 4	 VIDEO 4 4		 PRESET- SHIFT + TUNE- I<< / Preset-
 5	 TAPE 5 5		 SHIFT + TUNE- Shift + << /
 6	 TUNER 6 6		 SHIFT + TUNE+ Shift + >> /
 7	 AUX - HDD 7 7		 PRESET+ >>I / Preset+
 8	 USB 8 8		 TUNE- << / Tune-
 9	 BLUETOOTH 9 9		 SLOW Play / Slow
 0	 HDMI - BAT 0 0		 TUNE+ >> / Tune+
	 RETURN BACK Back / Return		 STEP - FREEZE Pause / Step / Freeze
	 YouTube REPEAT A-B Yellow / YouTube / Repeat		 HOLD Stop / Hold
			 DIMMER MUTE Mute / Dimmer
	 RDS AV INPUT AV / Input / RDS		 + VOL Vol+
			 - VOL Vol-



