 

 

 

 

 

 

 

 

 

 



 








 














Originale	Sostituto
 Source	 AV / Input / RDS
 Power	 Power
 [...]	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Sync Menu	 Shift + D.Menu / Top Menu
 Related Search	 Shift + Red / Netflix /
 Tv Pause	 Shift + Pause / Step /
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Title List	 Sound / Title
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Blue	 Blue / Prime Video / Random
 Social View	 Picture / Format
 Football	 Fav / Marker / PC
 SEN/APPS	 Shift + Green / APP /
 Discover	 Display / Media
 Guide	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return/Back	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Digital/Analog	 Smart / List
 [i+]/[?]	 Info / Angle
 ?/i-Manual	 D.Menu / Top





Originale		Sostituto	
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/Radio		TV/Radio /
	0		0
	[≡]/Text		Text / Goto
	Mute		Mute / Dimmer
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-

Originale		Sostituto	
	PR-		CH- / Page-
	Recall		Shift + Back / Return

