











 


































 







 









 



 



 

 



 



 







 







 















Originale	Sostituto
 Power	 Power
 Stereo/Mono	 Shift + Sound / Title
 Tv/Video	 TV/Radio /
 Memory	 Smart / List
 Muting	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Function	 Setup / OPT /
 4	 4
 5	 5
 6	 6
 Band	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Sound/Field	 Sound / Title

Originale	Sostituto
 0/10	 0
 +10	 Guide / EPG / -/-
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Tv CH-	 CH- / Page-
 Tv CH+	 CH+ / Page+
 Enter	 OK
 AMP Menu	 Menu / Home





Originale		Sostituto		Originale		Sostituto	
	Power		Power		DVD Menu		D.Menu / Top
	Muting		Mute / Dimmer		Function		Setup / OPT /
	Play Mode		Play / Slow		AMP Menu		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		Angle		Info / Angle
	<</Tuning-/<l		<< / Tune-		Left		Left
	Tuning+/Slow		>> / Tune+		Enter		OK
	l<</Preset-		l<< / Preset-		Right		Right
	>>l/Preset+		>>l / Preset+		Clear		Exit / Cancel / Clear
	Sound Field		Sound / Title		Down		Down
	Audio		Audio / Lang I/II		Return		Back / Return
	Subtitle		Subtitle / EQ		Vol+		Vol+
	Open/Close		Eject / Surround		Memory		Smart / List
	Band		Picture / Format		Vol-		Vol-
	Name		Zoom / Size		Display		Display / Media
	Time		Sleep / Timer		1		1
	Tv/Video		TV/Radio /		2		2



Program

