



 




 
 









Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Clock Timer	 Guide
 Clock Timer Set	 Pre Ch
 Display	 Info
 Tuner Memory	 Options
 Play Mode / Tuning Mode	 Shift + Play
 Repeat / FM Mode	 Text
 USB	 Red
 CD	 Yellow
 Tuner / Band	 Green
 Function	 Menu
 - / I<<	 I<<
 >>I / +	 >>I
 << / ←	 <<
 → / >>	 >>
 Play	 Play

Originale	Sostituto
 Pause	 Pause
 Stop	 Stop
 Clear	 Exit
 Enter	 Ok
 Vol +	 Vol +
 Vol -	 Vol -
 EQ	 Dual
 Search	 TV/R
 Folder +	 Ch +
 Folder -	 Ch -

