








 
 
 
 
 

 
 







 
 
 
 
 
 
 
 






Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 Input Tv	 AV
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Subtitle	 Subt
 Vol +	 Vol +

Originale	Sostituto
 Vol -	 Vol -
 Display	 Info
 Yellow	 Yellow
 Blue	 Blue
 Red	 Red
 Green	 Green
 Top Menu	 Shift + Menu
 Pop Up Menu	 Menu
 Return	 Back
 Options	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Home	 Smart
 I<<	 I<<





Originale	Sostituto	Originale	Sostituto
PAUSE	Pause		Pause
NEXT	>>I		>>I
	<<		<<
PLAY	Play		Play
	>>		>>
STOP	Stop		Stop
NETFLIX	Netflix		Media
SEN	SEN		TV/R

Originale	Sostituto

