





Originale	Sostituto
Input	AV / Input / RDS
Power	Power
[...]	Subtitle / EQ
Audio	Audio / Lang I/II
3D	Picture / Format
X/Relaxed Search	Fav / Marker / PC
Tv Pause	Shift + Pause / Step / Step /
<<<	<<< / Tune-
Play	Play / Slow
>>>	>>> / Tune+
Title List	Sound / Title
Rec	Rec / Rec Mode
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat

Originale	Sostituto
Blue	Blue / Prime Video / Random
?/i-Manual	Eject / Surround
Sync Menu	D.Menu / Top
SEN	Sleep / Timer
Guide	Guide / EPG / -/-
Up	Up
[i+]	Info / Angle
Left	Left
OK	OK
Right	Right
Return/Back	Back / Return
Down	Down
Options	Setup / OPT /
Home	Menu / Home
Digital/Analog	Smart / List
Exit	Exit / Cancel / Clear
TV/Radio	TV/Radio /





Originale	Sostituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [+]	 Zoom / Size
 0	 0
 [=]/Text	 Text / Goto
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Media	 Display / Media
 Vol-	 Vol-

Originale	Sostituto
 Prog-	 CH- / Page-

