



Originale	Sostituto
Muting	Dimmer / Mute
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<</>Slow/Tunin	<< / Tune-
Tuning+/Slow	>> / Tune+
I<</Preset-	I<< / Preset-
>>I/Preset+	>>I / Preset+
Bass Level	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Open/Close	Eject / Surround
Band	Picture / Format
Sleep	Sleep / Timer
Tv/Video	TV/Radio /
DVD Menu	D.Menu / Top

Originale	Sostituto
DVD Setup	Setup / OPT /
Name	Text / Goto
AMP Menu	Menu / Home
Up	Up
Angle	Info / Angle
Left	Left
Enter	OK
Right	Right
Clear	Exit / Cancel / Clear
Down	Down
Return	Back / Return
Vol+	Vol+
Memory	Smart / List
Vol-	Vol-
Display	Display / Media
1	1
2	2



