

 
 




 


 

 



 

 

 

 

 


 
 

 
 
 


 
 



 


 


 
 
 
 
 

 
 
 






















 



 
 
 
 
 
 
 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Red		Red
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue		Blue
	4		4		Guide		Guide
	5		5		Rec List		List
	6		6		Input		AV
	7		7		*		Menu
	8		8		Up		Up
	9		9		Right		Right
	0		0		Down		Down
	[i+]		Info		Left		Left
	[≡]		Text		OK		Ok
	Google Play		Shift + Media		Back		Back
	Netflix		Media		TV		TV/R

Non funzione di controllo vocale.





Originale		Sostituto		Originale		Sostituto	
	Home		Smart		Exit		Exit
	Vol+		Vol +				
	Vol-		Vol -				
	Recall		Pre Ch				
	Mute		Mute				
	CH+		Ch +				
	CH-		Ch -				
	Audio		Dual				
	[...]		Subt				
	Help		D. Menu				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Pause		Pause				

Non funzione di controllo vocale.

