 

 


 

 



 

 











 

 

 
 

 






 
 


Originale	Sostituto
 Power	 Power
 Input	 AV
 Digital/Analog	 Options
 Tv/Radio	 TV/R
 Exit	 Exit
 Ext.Box Menu	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]/[?]	 Info

Originale	Sostituto
 [≡]	 Text
 Google Play	 Media
 Netflix	 Shift + Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Action Menu	 Menu
 Back	 Back
 APPS	 Shift + Media
 TV	 3D
 Home	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale	Sostituto
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Recall	 Pre Ch
 Prog+	 Ch +
 Prog-	 Ch -
 <<	 <<
 Play	 Play
 >>	 >>
 I<<	 I<<
 Pause	 Pause
 >>I	 >>I
 Rec	 Rec
 Stop	 Stop
 Title List	 List
 Audio	 Dual

Originale	Sostituto
 [...]	 Subt
 Help	 Format

