 




 



 

 












 

 


 

 

 




 










 

 



Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Time/Text	 Text
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Source	 AV
 Picture Mode	 Format
 O)))	 Dual
 [...]	 Subt
 Camera	 TV/R
 SUR	 Options
 I<<	 I<<
 >>I	 >>I
 Zoom	 Shift + Eject
 Picture Navi	 Media
 <<	 <<
 >>	 >>
 Ch -	 Ch -
 Ch +	 Ch +
 Play	 Play
 Pause	 Pause
 Stop	 Stop





Originale	Sostituto
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Display	 Info
 Top Menu	 Shift + Menu
 Menu	 Menu
 Return	 Back

Originale	Sostituto

