



 
 

 
 
 



 


 

 


 
 
 




 
 
 
 






Originale	Sostituto
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Sleep	 Sleep
 S-Air Mode	 Red
 TV Input	 AV
 Picture Navi	 Media
 Dimmer	 Shift + Mute
 Display	 Info
 Function+	 Ch +
 Function-	 Ch -
 Audio	 Dual
 Subtitle /	 Subt
 Angle / Memory Select	 Format
 Sound Mode	 Shift + Dual
 Dynamic Bass	 Green
 Night	 Yellow

Originale	Sostituto
 System Menu	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Folder-	 Shift + Ch -
 Folder+	 Shift + Ch +
 DVD Menu	 D. Menu
 DVD Top Menu	 Shift + Menu
 Muting	 Mute





	Originale	Sostituto
	Volume+	Vol +
	Volume-	Vol -
	Up	Up
	Left	Left
	OK	Ok
	Right	Right
	Down	Down
	Return	Back
	Display / Tools	+ Shift + Info
	Display / Tools	OPT Options
	I<< / Preset-	I<<
	>>I / Preset+	>>I
	←• Replay / <II Step	+ Shift + Left
	•→ Advance / Step II>	+ Shift + Right
	<< / Tuning- / <I Slow	<<
	>> / Tuning+ / Slow I>	>>
	Play	Play

	Originale	Sostituto
	Pause	Pause
	Stop	Stop





Originale	Sostituto
TV Power	Power
Menu	Menu
TV Enter	Ok
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Volume+	Vol +
Volume-	Vol -
Prog+	Ch +

Originale	Sostituto
Prog-	Ch -

