


 



 







 











 

 



 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 [i+]/[?]	 Info
 A/B/[+]	 TV/R
 Input/[+]	 AV
 [ ]	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Originale	Sostituto
 Recall	 Back
 Timer/[≡i]	 List
 Timer/[X]	 Sleep
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 (↔)	 Dual
 Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 [≡]	 Text
 Red/Sound	 Red
 Green/*	 Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow				
	Blue/[+]		Blue				

