
















 




 




 

 
 
 
 

 








Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 Tv Input	 AV
 Open/close	 Eject
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit

Originale	Sostituto
 Audio	 Dual
 Picture Navi	 List
 Subtitle	 Subt
 Menu	 Menu
 Time/Text	 Text
 Return	 Back
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 ←/Replay/◀◀	 Ch -
 ▶/Advance/→	 Ch +
 >>I	 >>I
 <</<I	 <<



