





 







 





 



 





 



 

 







 





	Originale	Sostituto	Originale	Sostituto
	 Display	 Display / Media	 >> /Preset+	 >>  / Preset+
	 Power	 Power	 <</Tuning-	 << / Tune-
	 Function-	 Shift + Down	 Stop	 Stop / Hold
	 Function+	 Shift + Up	 >>/Tuning+	 >> / Tune+
	 Sound	 Sound / Title	 Vol+	 Vol+
	 Menu	 Menu / Home	 Vol-	 Vol-
	 Timer	 Sleep / Timer		
	 Up	 Up		
	 Folder-	 CH- / Page-		
	 OK	 OK		
	 Folder+	 CH+ / Page+		
	 Down	 Down		
	 Return	 Back / Return		
	 Clear	 Exit / Cancel / Clear		
	  <</Preset-	  << / Preset-		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		

