
 






 
 



 



 
 

 



 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		5		5
	▶▶		3D		6		6
	←		Back		7		7
	SAT		Smart		8		8
	Mute		Mute		9		9
	TV		TV/R		0		0
	[=]		Text		-/+		Guide
	→ / [ ]		AV		C		Exit
	□ → / [?]		Shift + AV		[=+]		Shift + Stop
	PIP / Split		Options		↑		Up
	PIP to Main		List		Vol+		Vol +
	PIP Swap / Split Swap		Pre Ch		Vol-		Vol -
	Split Hold		Shift + Pause		Prog+		Ch +
	1		1		Prog-		Ch -
	2		2		Red		Red
	3		3		Green		Green
	4		4		Yellow		Yellow





Originale		Sostituto		Originale		Sostituto	
	Blue		Blue		Stop		Stop
	[≡?][+]		Info		Pause		Pause
			D. Menu				
	[Ⓞ]		Sleep				
	■		Shift + Format				
	Aspect		Format				
	♪		Dual				
	+		Right				
	-		Left				
	Menu		Menu				
	OK		Ok				
	Power Down		Shift + Power				
	Prog+ Down		Shift + Ch +				
	Prog- Down		Shift + Ch -				
	<<		<<				
	Play		Play				
	>>		>>				

 

 

 






 


 





Originale	Sostituto	Originale	Sostituto
Power Down	Power		
Prog+ Down	Ch +		
Prog- Down	Ch -		
Stop	Stop		
Pause	Pause		
Rec	Rec		
>>	>>		
Play	Play		
<<	<<		





 


 
 





 





Originale	Sostituto	Originale	Sostituto
 Power Down	 Power		
 Prog+ Down	 Ch +		
 Prog- Down	 Ch -		
 Stop	 Stop		
 Pause	 Pause		
 Rec	 Rec		
 >>	 >>		
 Play	 Play		
 <<	 <<		





Originale	Sostituto	Originale	Sostituto
 Power Down	 Power		
 Prog+ Down	 Ch +		
 Prog- Down	 Ch -		
 <<<	 <<<		
 Play	 Play		
 >>>	 >>>		
 Stop	 Stop		
 Pause	 Pause		
 Rec	 Rec		

