 
 





 

 
 
 
 
 

 

 
 



 
 
 
 
 



 










 

Originale	Sostituto
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Originale	Sostituto
 Down	 Down
 Return	 Back
 System Menu	 Menu
 [ + ] Display	 Info
 I<< / Preset-	 I<<
 Replay	 Shift + Left
 Advance	 Shift + Right
 >>I / Preset+	 >>I
 << / <I / Tuning-	 <<
 Play	 Play
 >> / I> / Tuning+	 >>
 Pause	 Pause
 Stop	 Stop
 TV	 TV/R
 Muting	 Mute
 Volume+	 Vol +
 Volume-	 Vol -

Originale	Sostituto
 Sound Mode+	 Ch +
 Sound Mode-	 Ch -





Originale	Sostituto	Originale	Sostituto
Power	Power	Source	AV
[i+]	Info	Tools / Options	Options
Analog	Media	Home / Menu	Menu
Digital	Smart	Muting	Mute
1	1	Volume+	Vol +
2	2	Volume-	Vol -
3	3	Prog+	Ch +
4	4	Prog-	Ch -
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
Text	Text		
-/--	Shift + Guide		
Guide	Guide		

Originale	Sostituto
Source	AV
Tools / Options	Options
Home / Menu	Menu
Muting	Mute
Volume+	Vol +
Volume-	Vol -
Prog+	Ch +
Prog-	Ch -

