


 
 
 
 









 


 




Originale	Sostituto
 Operate	 Power
 Sleep	 Sleep
 Function	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 >10	 Guide
 Mode	 Format
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Band/Radio	 TV/R
 Tune+	 Ch +
 Tune-	 Ch -
 Mega Xpand	 Options
 Mega Bass	 Subt
 Sound	 Dual

