


 











 
 
 

 
 



 


 
 


 

 



 

 



 
 




 

 

 


 
 













 

 



 

















 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 SA-CD/CD	 Media
 Open/Close	 Eject	 Shuffle	 Yellow
 1	 1	 A-B	 Shift + Play
 2	 2	 Audio	 Dual
 3	 3	 Subtitle	 Subt
 4	 4	 Angle	 Red
 5	 5	 Picture Navi	 3D
 6	 6	 Time/Text	 Text
 7	 7	 Repeat	 Shift + Text
 8	 8	 Sur	 Options
 9	 9	 Picture Mode	 Format
 0	 0	 Search Mode	 TV/R
 Clear	 Exit	 Replay	 Shift + I<<
 Enter	 Pre Ch	 I<<	 I<<
 TV/DVD / Input	 AV	 >>I	 >>I
 Aspect	 Shift + Format	 < [<<]	 Ch -
 SA-CD	 Smart	 [>>] >	 Ch +






 





 
 




 

 




 
 




 
 
Multi/2CH



Originale	Sostituto	Originale	Sostituto
 << Scan/<I	 <<		
 Scan >>/Slow	 >>		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Up	 Up		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Down	 Down		
 Display	 Info		
 Menu	 Menu		
 Top Menu	 D. Menu		
 Return	 Back		





Originale	Sostituto	Originale	Sostituto
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Enter	 Ok		
 TV/DVD	 TV/R		
 Vol+	 Vol +		
 Vol-	 Vol -		

