






 
 

 



 





 




 

 

 











 

 
 
 
 
 
 


 


 

 

 
 


 











Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 FM Mode	 TV/R
 Tuner Memory	 Format
 Repeat	 Text
 Theatre Sync	 Shift + Power
 Timer Menu	 Smart
 Sleep	 Sleep
 Display	 Info
 Time/Text	 AV
 Dimmer	 Media
 Function+	 Ch +
 Function-	 Ch -
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 Angle	 Options

Originale	Sostituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Folder+	 Shift + Ch +
 Folder-	 Shift + Ch -
 DVD Top Menu	 Menu
 DVD/USB Menu	 D. Menu
 EQ	 3D
 Return	 Back







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Enter	 Ok
 Tv/Video	 TV/R		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 10/0	 0		
 -/-	 Guide		
 CH+	 Ch +		
 CH-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		

