 






 
 

 
 


 
 
 


 

 

 

 





 

 

 
 


 



 
 

 






 









 
 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 C	 Pre Ch
 Mute	 Mute	 [*]	 TV/R
 []	 Smart	 [↔*]	 Subt
 [≡]	 Text	 [↑*]	 List
 Input	 AV	 [↑]	 Options
 Output	 Media	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 [≡+]	 3D
 5	 5	 [+]	 Info
 6	 6	 SAT	 Back
 7	 7	 Prog+	 Ch +
 8	 8	 Prog-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Guide	 Picture	 Format
















 
 





Originale	Sostituto	Originale	Sostituto
	♪		Dual
	←		Left
	Up/+		Up
	Down/-		Down
	Menu		Menu
	OK		Ok
	Power MDP		Shift + Power
	>> MDT		>>
	Play MDT		Play
	<< MDT		<<
	Stop MDT		Stop
	Pause MDT		Pause
	Prog+ MDT		Shift + Ch +
	Prog- MDT		Shift + Ch -





 
 



 







 




Originale		Sostituto		Originale		Sostituto	
	Power		Power				
	Prog+		Ch +				
	Prog-		Ch -				
	>>		>>				
	Play		Play				
	<<		<<				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				





Originale	Sostituto	Originale	Sostituto
 Power	 Power		
 Prog+	 Ch +		
 Prog-	 Ch -		
 >>	 >>		
 Play	 Play		
 <<	 <<		
 Stop	 Stop		
 Pause	 Pause		
 Rec	 Rec		





Originale		Sostituto	
	Power		Power
	Prog+		Ch +
	Prog-		Ch -
	>>		>>
	Play		Play
	<<		<<
	Stop		Stop
	Pause		Pause
	Rec		Rec

Originale		Sostituto	

