





 
 

 



 





 
 
 



 


 


 



 






 
 





 







 


 



 














Originale	Sostituto	Originale	Sostituto
 Power	 Power	 [=]	 Text
 Input	 AV	 Google Play	 Shift + Smart
 Tv/Radio	 TV/R	 Netflix	 Media
 Sync Menu	 Menu	 Red	 Red
 Digital/Analog	 Format	 Green	 Green
 Exit	 Exit	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 TV	 3D
 3	 3	 Guide	 Guide
 4	 4	 Action Menu	 D. Menu
 5	 5	 Discover	 Options
 6	 6	 Back	 Back
 7	 7	 Home	 Smart
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+]/[?]	 Info	 Left	 Left

Originale	Sostituto	Originale	Sostituto
 MUTE		 TV	 DVD
 TV	 SAT	 AUX	