


 



 


 






 







 
 

 
 
 
 
 








 
 
 
 




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide
 Enter1	 Pre Ch
 Tv CH+	 Ch +
 Tv CH-	 Ch -
 DVD Top Menu	 Smart
 Volume+	 Vol +

Originale	Sostituto
 Volume-	 Vol -





Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Muting	 Mute
 Tuner/Band	 Green
 Open/Close	 Eject
 Auto Format	 Format
 Auto Format	 AV
 DSGX	 List
 Tuner Menu	 Menu
 Play Mode	 Yellow
 Repeat	 Text
 FM Mode	 Shift + TV/R
 Night Mode	 Blue
 Function	 3D
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide
 Enter1	 Pre Ch
 Audio	 Dual
 Angle	 Red
 Subtitle	 Subt
 I<</Preset-	 I<<
 >>I/Preset+	 >>I
 <</Tuning-/<I	 <<
 >>/Tuning+/Slow	 >>
 Play	 Play



