





 






 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Red		Red / Netflix / Search
	1		1		Green		Green / APP / Repeat
	2		2		Yellow		Yellow / YouTube / Repeat
	3		3		Blue		Blue / Prime Video / Random
	4		4		Guide		Guide / EPG / -/-
	5		5		Rec List		Smart / List
	6		6		Source		AV / Input / RDS
	7		7		*		Menu / Home
	8		8		Micro		Display / Media
	9		9		Up		Up
	0		0		Down		Down
	[i+]		Info / Angle		Right		Right
	[=]		Text / Goto		Left		Left
	YouTube		Shift + Yellow / YouTube /		OK		OK
	Netflix		Shift + Red / Netflix /		Back		Back / Return
	Disney Plus		Shift + Green / APP /		TV		TV/Radio /
	prime video		Shift + Blue / Prime Video / Random		Home		Shift + Menu / Home





Originale	Sostituto	Originale	Sostituto
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Recall		Fav / Marker / PC
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	[...]		Subtitle / EQ
	Help		Zoom / Size
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear

Originale	Sostituto	Originale	Sostituto

