



 

 

 

 

 

 

 

 

 

 



 



 







 

 

 

 



 

 


 
 





 











Originale	Sostituto
 Power	 Power
 Theatre	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 ENT/MEM	 Fav / Marker / PC
 A.F.D.	 Audio / Lang I/II
 Movie	 Subtitle / EQ
 Music	 TV/Radio /
 Auto Cal	 Text / Goto

Originale	Sostituto
 Input Mode	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Night Mode	 Picture / Format
 Display	 Display / Media
 AMP Menu	 D.Menu / Top
 2CH/A.Direct	 Zoom / Size
 Options/Tools	 Setup / OPT /
 Return/Exit	 Back / Return
 Up	 Up
 Home/Menu	 Menu / Home
 OK	 OK
 Down	 Down
 Right	 Right
 Left	 Left
 I<<	 I<< / Preset-
 ←	 Red / Netflix / Search
 →	 Green / APP / Repeat






 



 



 




 

















 

 



 

 



 










Originale	Sostituto
	>>I / Preset+
	<</Tuning-
	Play / Slow
	>>/Tuning+
	Pause / Step / Freeze
	Stop / Hold
	Vol+
	Vol-
	Mute / Dimmer
	Shift + >>I / Preset+
	Shift + I<< / Preset-
	Shift + 4
	Shift + 5
	Shift + 3
	Shift + 0
	Shift + 2
	Shift + 8

Originale	Sostituto
	Shift + 1
	Shift + 9
	Shift + 6
	Shift + <</
	Shift + >>/
	Shift + Stop /





Originale	Sostituto
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 -/--	 Guide / EPG / -/--
 ENT/MEM	 Fav / Marker / PC
 Display	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right

Originale	Sostituto
 Left	 Left
 OK	 OK
 Home/Menu	 Menu / Home
 Return/Exit	 Back / Return
 Options/Tools	 Setup / OPT /
 I<<	 I<< / Preset-
 ←	 Red / Netflix / Search
 →	 Green / APP / Repeat
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Tv Vol+	 Vol+
 Tv Vol-	 Vol-
 Muting	 Mute / Dimmer





	Originale	Sostituto	Originale	Sostituto
	Tv CH+	 CH+ / Page+		
	Tv CH-	 CH- / Page-		
	Tv Input	 AV / Input / RDS		
	Wide	 Picture / Format		

