







 







 

 

 

 

 




 






 

 



 

 

 

 

 

 

 

 



 

 

 










 
 


Originale	Sostituto
 Open/Close	 Eject / Surround
 Speakers Tv	 TV/Radio /
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Bluetooth	 Shift + 9
 Home/Menu	 Menu / Home
 Sen	 AV / Input / RDS
 Function	 Info / Angle
 Football	 Picture / Format
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II









 

 

 



 

 



 

 

 

 



 

 







 



 









 



 

 





 

 
 
	Originale	Sostituto
	Subtitle	 Subtitle / EQ
	Display	 Display / Media
	Music EQ	 Text / Goto
	<</Tuning-	 << / Tune-
	Play	 Play / Slow
	>>/Tuning+	 >> / Tune+
	<</Preset-	  << / Preset-
	Pause	 Pause / Step / Freeze
	Stop	 Stop / Hold
	>> /Preset+	 >>  / Preset+
	Mute	 Mute / Dimmer
	Vol+	 Vol+
	Sleep	 Sleep / Timer
	Vol-	 Vol-

	Originale	Sostituto



 

 





 



 



 







Originale	Sostituto
 Speakers TV Audio Bravia Sync	 AV / Input / RDS
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=]	 Text / Goto
 0	 0
 Enter	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 <</Tuning-	 << / Tune-
 Play	 Play / Slow





Originale		Sostituto		Originale	Sostituto
	>>/Tuning+		>> / Tune+		
	<</Preset-		<< / Preset-		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	>> /Preset +		>>  / Preset+		
	Mute		Mute / Dimmer		
	Vol+		Vol+		
	Prog+		CH+ / Page+		
	Sleep		Sleep / Timer		
	Vol-		Vol-		
	Prog-		CH- / Page-		





Originale	Sostituto
Speakers TV Audio Bravia Sync	TV/Radio /
Power AV Bravia Sync	+  Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
[=]	Text / Goto
0	0
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat

Originale	Sostituto
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Home/Menu	Menu / Home
Subtitle	Subtitle / EQ
Display	Display / Media
Mute	Mute / Dimmer
Vol+	Vol+
Prog+	CH+ / Page+
Sleep	Sleep / Timer
Vol-	Vol-
Prog-	CH- / Page-

