 







 





 
 

 











 













 

 

 



 



 















Originale	Sostituto
 Open / Close	 Eject / Surround
 Power	 Power
 TV Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Display	 Shift + Display / Media
 Function+	 CH+ / Page+
 Video Format	 Shift + Picture / Format
 Movie / Music	 Sound / Title
 Dynamic Bass	 Shift + Sound / Title
 Function-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0
 Enter	 Fav / Marker / PC
 Picture Navi	 Picture / Format
 Audio	 Audio / Lang I/II
 Subtitle /	 Subtitle / EQ
 Angle	 Info / Angle
 DVD Top Menu	 D.Menu / Top
 Up	 Up
 DVD Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down





Originale	Sostituto
System Menu	Smart / List
[-]Display	Display / Media
I<< / Preset-	I<< / Preset-
Replay	Shift + Left
Advance	Shift + Right
>>I / Preset+	>>I / Preset+
<I / << / Tuning-	<< / Tune-
Play	Play / Slow
>> / I> / Tuning+	>> / Tune+
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Volume+	Vol+
Sound Field+	Shift + Vol+
Muting	Mute / Dimmer
Volume-	Vol-
Sound Field-	Shift + Vol-

Originale	Sostituto

