



	Originale	Sostituto	Originale	Sostituto
	Photo	Smart / List		
	Start Stop	Power		
	T	CH+ / Page+		
	Search M.	Red / Netflix / Search		
	I<<	I<< / Preset-		
	>>I	>>I / Preset+		
	W	CH- / Page-		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	Slow I>	Shift + Play /		
	Slow I>	Right		
	Zero Set	Green / APP / Repeat		
	Display	Display / Media		

