














 








 









 









 











 

 


















 

 



Originale	Sostituto
 Power	 Power
 Wide	 Picture / Format
 Choix Son	 Audio / Lang / I/I
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Tv/Magn	 TV/Radio /
 Affich	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 [=]	 Text / Goto
 []	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Chaine+	 CH+ / Page+
 Chaine-	 CH- / Page-
 Menu	 Menu / Home





Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 Annul Program	 Back / Return
 Remise a Zero	 Smart / List
 X2	 Picture / Format
 Choix Son	 Audio / Lang I/II
 Wide	 Zoom / Size
 Tv/Magn	 TV/Radio /
 Showview	 Display / Media
 Affich	 Info / Angle
 Prog Rapide	 Setup / OPT /
 Choix Entree	 AV / Input / RDS
 Vitesse Bande	 Text / Goto
 ENR	 Rec / Rec Mode
 Ralenti	 Blue / Prime Video / Random
 Recher Index >>I	 >>I / Preset+
 I<< Recher Index	 I<< / Preset-

Originale	Sostituto
 Chaine+	 CH+ / Page+
 Chaine-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 Envoi	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Relect	 Subtitle / EQ
 Up	 Up





	Originale	Sostituto	Originale	Sostituto
		Pause		Pause / Step / Freeze
		Down		Down
		Stop		Stop / Hold
		Right		Right
		>>		>> / Tune+
		<<		<< / Tune-
		Left		Left
		Play		Play / Slow
		Execute		OK
		Volume+		Vol+
		Volume-		Vol-

