
 

 




Originale	Sostituto
 Display	 Display / Media
 Search	 Sleep / Timer
 Standby	 +  Shift + Power
 Operate	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mode	 Picture / Format
 0/10	 0
 >10	 Guide / EPG / -/-
 Tune+	 >> / Tune+

Originale	Sostituto
 Mega Bass	 Audio / Lang I/II
 Vol+	 Vol+
 Tune-	 << / Tune-
 Sound	 Sound / Title
 Vol-	 Vol-
 Band	 TV/Radio /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Stop Tape	 OK
 < Tape	 Left
 Tape >	 Right
 Rec/Pause Tape	 Rec / Rec Mode
 << Tape	 CH- / Page-
 Tape >>	 CH+ / Page+

