



 




 
 







Originale	Sostituto
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Preset-	 I<< / Preset-
 >>I/Preset+	 >>I / Preset+
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle/D.Tuning	 Subtitle / EQ
 Picture Navi	 Picture / Format
 S-Air Mode	 Zoom / Size
 Sleep	 Sleep / Timer
 Tv Input	 AV / Input / RDS
 System	 D.Menu / Top

Originale	Sostituto
 Display/Tools	 Setup / OPT /
 One -Touch Play	 Text / Goto
 Menu/DVD	 Menu / Home
 Theatre	 TV/Radio /
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Volume+	 Vol+
 Dynamic Bass	 Smart / List
 Function+	 CH+ / Page+
 Volume-	 Vol-
 Display	 Display / Media



Menu/Enter

Menu



Originale	Sostituto
Power	Power
Tv Vol+	Vol+
Tv Input	AV / Input / RDS
Tv Vol-	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Guide / EPG / -/--
0	0
Enter	Fav / Marker / PC
Menu	Menu / Home

Originale	Sostituto
Muting	Mute / Dimmer
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Tools	Setup / OPT /
Prog-	CH- / Page-
Prog+	CH+ / Page+

