 

 
 
 

 
 
 







Originale	Sostituto
 Power	 Power
 [=]	 Text / Goto
 Enter	 OK
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Vol-	 Vol-
 Prog-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--

Originale	Sostituto
 0	 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Repeat	 Shift + Green / APP / Repeat





Originale	Sostituto
Open/Close	Eject / Surround
Display	Display / Media
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Wide Mode	Zoom / Size
Tv/Video	TV/Radio /
-/--/Search Mode	Guide / EPG / -/--
0	0
Clear	Exit / Cancel / Clear

Originale	Sostituto
Time	Sleep / Timer
Red/Shuffle	Red / Netflix / Search
Green/Program	Green / APP / Repeat
Repeat	Shift + Green / APP /
A-B	Shift + Yellow / YouTube /
Yellow/Audio	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
[=]/Subtitle	Text / Goto
Subtitle On/Off	Subtitle / EQ
AV Center	AV / Input / RDS
< I Step	Shift + Left
Step >	Shift + Right
< I Slow	CH- / Page-
Slow >	CH+ / Page+
AV Vol+	Vol+
<</Prev	<< / Preset-
>> /Next	>> / Preset+





Originale		Sostituto	
	<< Scan		<< / Tune-
	>> Scan		>> / Tune+
	AV Vol-		Vol-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Set Up		Setup / OPT /
	Title		Sound / Title
	DVD Menu		D.Menu / Top
	Return		Back / Return
	Tv/DVD	+	Shift + TV/Radio / Program
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down

Originale	Sostituto

