



	Originale	Sostituto	Originale	Sostituto
	Power	Power		5
	→←	Smart / List		6
	Mute	Mute / Dimmer		7
	[I]	Shift + Guide / EPG / -/--		8
	Power Video	Shift + Power		9
	[]	Picture / Format		0
	Text	Text / Goto		-/--
	Input	AV / Input / RDS		Recall
	1	1		Red
	□ / □	Setup / OPT /		Green
	[> <]	Display / Media		Yellow
	□ / □	D.Menu / Top		Blue
	↑	Zoom / Size		Up
	[i+]	Info / Angle		Left
	2	2		OK
	3	3		Right
	4	4		Down





	Originale	Sostituto	Originale	Sostituto
	Vol+	Vol+		
	Vol-	Vol-		
	Menu	Menu / Home		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	Rec	Rec / Rec Mode		
	Progr+	CH+ / Page+		
	CH+	Shift + CH+ /		
	CH-	Shift + CH- /		
	Progr-	CH- / Page-		
	[⏰]	Sleep / Timer		



