



Originale	Sostituto
SLEEP	Sleep
DIMMER	Dimmer
DISPLAY	Display
RECEIVER	Power
TUNER	Band/Tuner
SHIFT	Shift
FM MODE	FM Mode
+	Function+
PRESE	Preset-
RESET	Preset+
FUNCTION	Function-
CD	Play CD
	Pause CD
	Stop CD
	I<< CD
	>>I CD
	Vol+

Originale	Sostituto
MD	Play MD
	Pause MD
	Stop MD
VOL	Vol-
	I<< MD
	>>I MD
MUTING	Muting
EQ	Bass+
	MID+
	Treble+
BASS	Bass-
	Mid-
TREBLE	Treble-
	EQ Bank

