





 

 
 
 

 
 
 

 
 
 
 
 

 

 

 

 

 

 


 
 



 

 

 
 
 

 
 
 
 
 
 
 

 

 

 
 
 



 





Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Vol-		Vol -
	Auto		Smart		CH+		Ch +
	Tv/Radio		TV/R		CH-		Ch -
	Mute		Mute		Nicam/A2		Options
	1		1		Aspect		3D
	2		2		Display		Info
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Menu		Menu
	9		9		Exit		Exit
	0		0		Source		AV
	-/--		Shift + Guide		P.Mode		Shift + Format
	Back		Back		S.Mode		Shift + Dual
	Vol+		Vol +		Sleep		Sleep





Originale	Sostituto
 Fav	 Pre Ch
 Fav-	 Shift + Ch -
 Fav+	 Shift + Ch +
 Hold	 Shift + AV
 EPG	 Guide
 Text	 Text
 Lang	 Dual
 Subtitle	 Subt
 Index	 List
 Reveal	 Eject
 Subpage	 D. Menu
 Media	 Media
 Size	 Format
 Play	 Play
 Pause	 Pause
 <<<	 <<<
 >>>	 >>>

Originale	Sostituto
 Rec	 Rec
 Stop	 Stop
 I<<<	 I<<<
 >>>I	 >>>I
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

