



 





 
 
 
 


 
 

 

 

 






 
 

 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Shift + Pre Ch
 Recall	 Pre Ch
 Game	 Media
 Auto	 Smart
 Info	 Info

Originale	Sostituto
 Menu	 Menu
 EPG	 Guide
 Exit	 Exit
 Up / CH + / I<<	 Up
 Down / CH - / >>I	 Down
 Right / Vol +	 Right
 Left / Vol -	 Left
 OK	 Ok
 Up / CH + / I<<	 I<<
 Down / CH - / >>I	 >>I
 Up / CH + / I<<	 Ch +
 Down / CH - / >>I	 Ch -
 Left / Vol -	 Vol -
 Right / Vol +	 Vol +
 Red / Zoom	 Red
 Green / Lan/Audio	 Green
 Yellow /	 Yellow



Play/Pause

