
 
 


 

 
 

 


 




 
 

 


 


 





	Originale	Sostituto		Originale	Sostituto
	Power		Power		Dev.List
	Mute		Mute		Video
	1		1		Subtitle
	2		2		Text
	3		3		Auto
	4		4		Menu
	5		5		Zoom
	6		6		Info
	7		7		Exit
	8		8		CH+
	9		9		CH-
	0		0		Up
	FAV		Pre Ch		Down
	Recall		Back		Right
	Lang		Dual		Left
	Time Shift		Smart		Enter
	Tv/Radio		TV/R		Vol+
					Vol +





Originale	Sostituto	Originale	Sostituto
 Vol-	 Vol -		
 Filelist	 Media		
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 I<<	 I<<		
 >>I	 >>I		
 Red/FAV/Daily	 Red		
 Green/DEL/Weekl	 Green		
 Yellow/Movie/P.Inf	 Yellow		
 Blue/Lock/Timer	 Blue		

